

This Digital Photo Viewer Desktop is a stand-alone device that is designed to transfer, store and display images from a PC and then display the images. Using the application software supplied with this device, you can organize, edit, enhance and download the images in your PC to this device using the provided USB cord. This device also has an alarm clock function with an LCD readout that displays the time, temperature and date.

QUICK START GUIDE

Before using the device, remember to charge the devices' battery for 2 hours. The battery can be charged by using either the USB cable (that connects to the PC or laptop) or the USB-to-AC Adaptor (connects to wall socket or power strip). **DO NOT** charge device for more than 12 hours. **DO NOT** unplug the device while Photo Viewer software on your computer screen is still open. To stand the device up, open the bottom flap and swing it as far as it will go on the hinge so that it will be propped up vertically.

INSTALLATION

1. Place the mini-CD in the center ring of your disc drive, then wait for the prompt to Install. If no prompt displays, go to "Start -> My Computer" and click on the disc drive that displays "Photo Viewer". Click on the file "SETUP_UT1.02". Follow the instructions to install.
2. Before you open Photo Viewer for the first time, connect the device to the USB slot. The drivers will automatically install. **NOTE:** The unit automatically turns on when plugged into your computer.

PHOTO VIEWER

1. Double Click the Photo Viewer icon on your desktop (a green and red donut shape) **OR** click Start -> All Programs -> Photo Viewer (folder) -> Photo Viewer (program).
2. There are three columns. From left to right, they are:
 - a. The photos that are on the device. 'PHOTOS ON DEVICE'
 - b. The photos on your computer. 'BROWSE FOR IMAGES'
 - c. The photos that are going to be transferred to the device. 'COLLECTION PANEL'
3. To view or delete the photos already stored in the photo viewer, use the buttons at the bottom left corner of the software screen: 'VIEW PHOTOS' 'DELETE' and 'DELETE ALL'. If this is your first time using the device, use 'DELETE ALL' to remove the sample photos.
4. To add photos to the 'COLLECTION PANEL' on the right, browse for pictures you want to transfer. Select a picture and add it by clicking 'ADD TO COLLECTION PANEL' underneath. To select multiple photos, hold 'CTRL' and click each photo individually. To select multiple photos in a series, click the first photo, then hold 'SHIFT', then click the last photo in the series.
5. In the rightmost panel, 'COLLECTION PANEL', select a picture and then click 'TRANSFER COLLECTION TO DEVICE' to transfer all photos to the device.

EDITING PHOTOS

1. To edit a photo, highlight it in the Browse Panel in the middle and click the 'CROP PHOTO' icon at the bottom.

2. The faint rectangle you see around the picture is the cropping tool. You can click and drag on the boxes in the corner of the rectangle to resize it. When you click DONE, the resulting picture will be everything within the bounds of the box.
3. On the bottom left, the two turning symbols shift the picture 90 degrees in either direction.
4. In the center, the slider bars control CONTRAST and BRIGHTNESS, and are previewed as you slide them. RESET sets both counters to zero.
5. Click CANCEL to return to the Browse Panel or DONE to bring the edited photo to the Collection Panel.

DEVICE FUNCTIONS

On the left side, there are five buttons. From the top, the five buttons are:

1. **PHOTO VIEWER MODE BUTTON/POWER:** Hold for 3 seconds to turn on, hold for 3 seconds to turn off. Pressing MODE switches between Auto Play ON/OFF. Autoplay is a slide show mode. Turn Autoplay off first before you turn off the device.
2. **SCROLL UP:** Scrolls through pictures. Hold SCROLL UP for several seconds until 'DELETE' appears to delete the current photo on your screen. Press 'MODE' to delete.
3. **SCROLL DOWN:** Scrolls through pictures. Hold SCROLL DOWN for several seconds until 'DELETE ALL' appears to delete all files. Press 'MODE' to delete all files on your device.
4. **°F/°C:** Switches between Fahrenheit and Celsius on Clock LCD.
5. **LIGHT:** A backlight for the Clock LCD. Pressing it lights the screen for 5 seconds.

On the right side, there are 2 buttons and the USB port. From the top, the buttons are:

1. **CLOCK LCD MODE BUTTON:** Allows you to set the time, date and alarm settings. Press 'MODE' while the alarm is sounding to snooze when Snooze Mode is on.
2. **ALARM AND 12/24 BUTTON:**
12/24: Pressing the button normally switches between 12 hour display and military 24 hour display.
ALARM: Pressing 'MODE' once activates ALARM MODE. Pressing 'ALARM' in this mode changes between 3 settings:
 1. ALARM OFF: no icon
 2. ALARM ON: a bell icon
 3. ALARM + SNOOZE ON: a bell icon and a 'ZZZ' icon

SETTING UP ALARM AND CLOCK

TO SET THE TIME AND DATE:

1. While the LCD display is showing the date and time, hold down 'MODE' until you hear a beep and the last two digits of the year start blinking.
2. To advance the date, press 'ALARM' and to go backward, press '°F/°C'. Hold either button to advance quickly.
3. To confirm your selection, press 'MODE'.
4. Repeat until you have changed all the settings.

TO SET THE ALARM

1. Press 'MODE' once until you see the Alarm Display. Hold down 'MODE' until you hear a beep and the last two digits of the year start blinking.
2. To advance the date, press 'ALARM' and to go backward, press '°F/°C'. Hold either button to advance quickly.
3. To confirm your selection, press 'MODE'.
4. Repeat until you have changed all the settings.
5. When the month and date show ("—"), then the alarm is a daily alarm.